

Garbage Disposal Troubleshooting


When your garbage disposal is on the fritz, it could be a few things.

Check to see if there is something in the drain that is jamming the disposer. Be sure you have turned off the garbage disposal to avoid injury.

Use a garbage disposal key, hex key or Allen wrench of appropriate size.

Press the reset button on the bottom of the garbage disposal. It's usually red in color.

Check GFI/GFCI outlets to see if one has tripped.

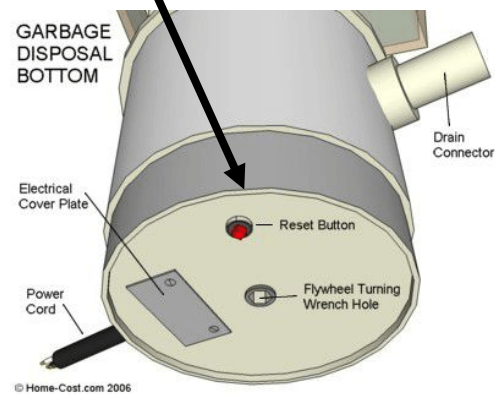

A Tripped Breaker could be to blame. See below examples of tripped breakers and how to properly reset.

⇒ Locate the tripped breaker. Breakers have tripped when they are “out of line”. See example below.

⇒ To re-set the breaker, turn it to the “off” position, then turn it back to the “on” position.

